

## Modbus RTU/TCP

### GOLD sizes 04-80, program version 1.05 and newer versions.

---

#### Overview

ModBus can access single addresses or multiple addresses simultaneously; either reading or writing single bit values or 16-bit values.

A ModBus address contains either a 1-bit discrete value or a 16-bit integer value.

#### ModBus data format


ModBus data types are 1-bit values and 16-bit values.

ModBus Type	Description	Reference
Coil Status	Discrete Output	0x
Input Status	Discrete Input	1x
Holding Register	16-bit Output Register	4x
Input Register	16-bit Input Register	3x

#### Supported ModBus commands

The GOLD air handling unit supports these ModBus commands.

Function code	Description
01	Read Coil Status
02	Read Input Status
03	Read Holding Registers
04	Read Input Registers
05	Force Single Coil
06	Present Single Registers
08	Diagnostics.Sub-function 00 Only - Return Query Data (loop back).
15	Force Multiple Coils
16	Preset Multiple Registers

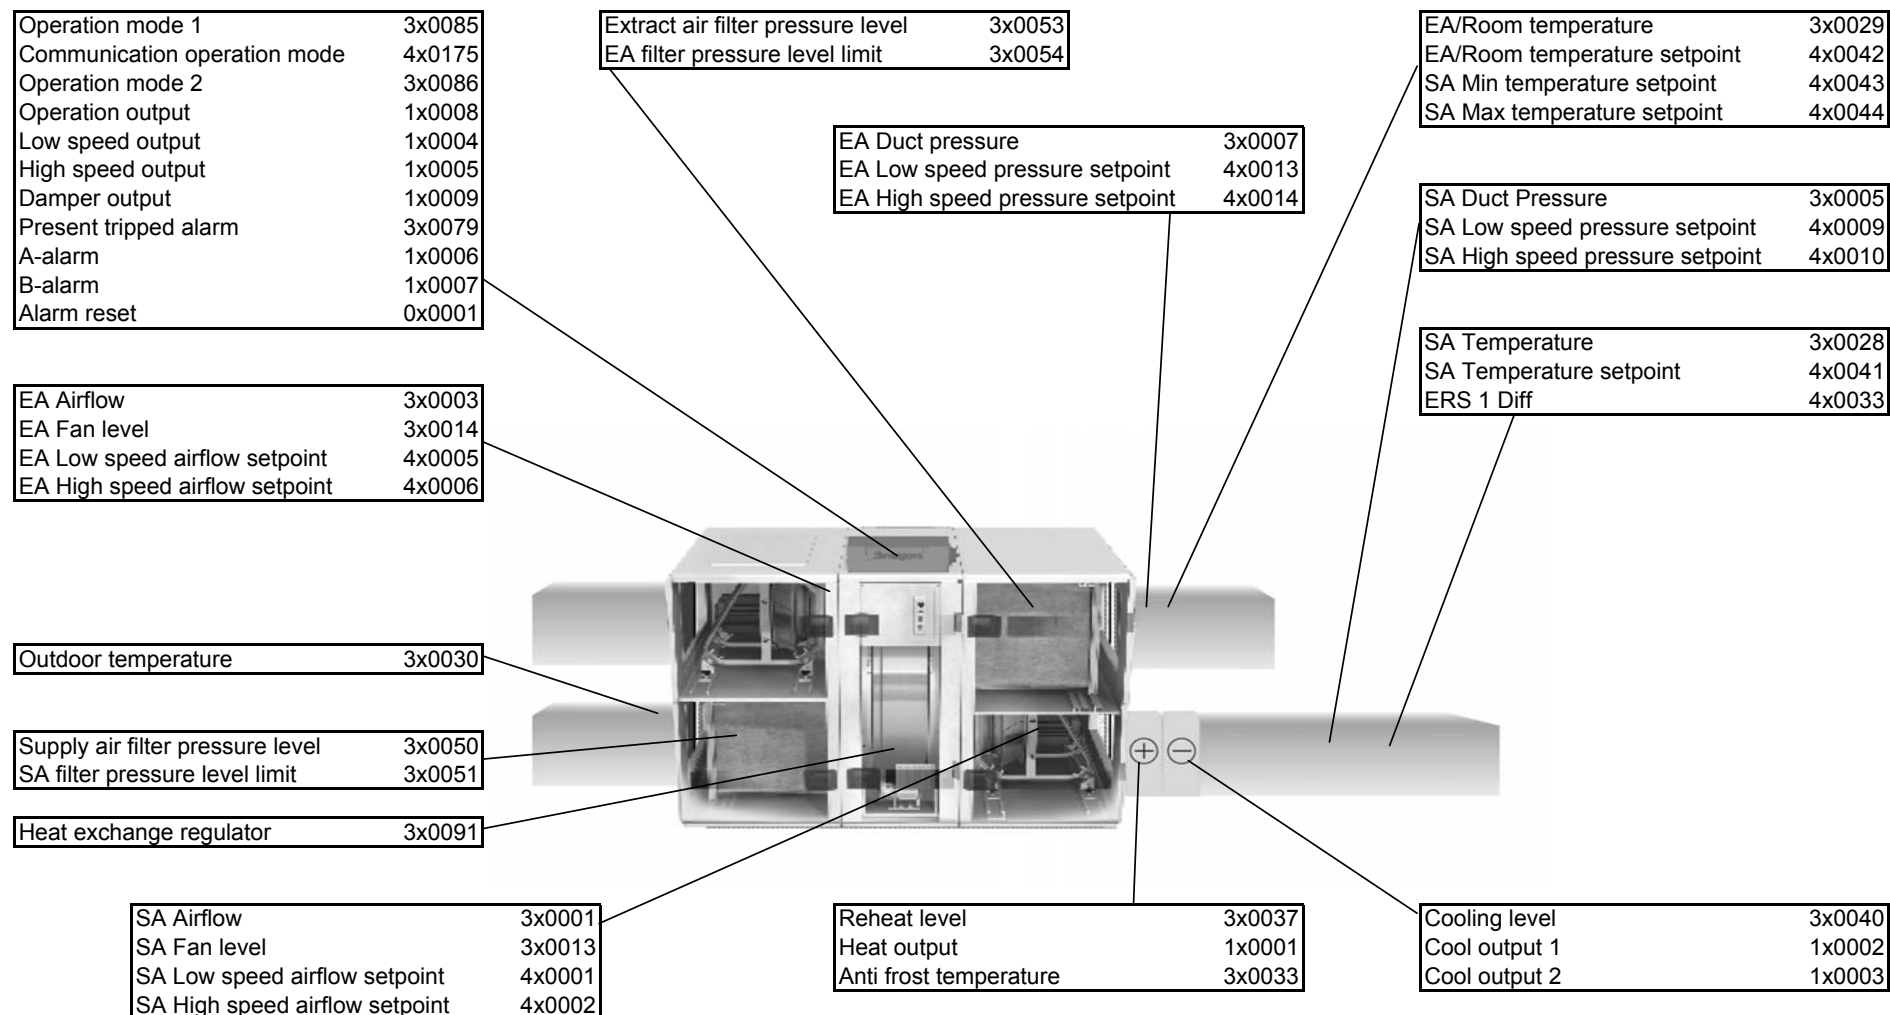

**Coil Status. 1bit (R/W).**

Modbus	Name	Min/Max	Misc
0x0001	<b>Alarm reset</b>	0-1	
	Resets tripped alarms.		
0x0002	<b>SA Boosting func.</b>	0-1	
	Setting for activating the boost function for the supply air fan.		
0x0003	<b>EA Boosting func.</b>	0-1	
	Setting for activating the boost function for the extract air fan.		
0x0004	<b>R.HX. Defrost func.</b>	0-1	
	Setting for activating the defrost function for the rotary heat exchanger.		
0x0005	<b>SA Down regulation func.</b>	0-1	PV 3.00
	Setting for activating the down regulation function for the supply air fan. (Moved to 4x0207 in PV 3.00)		
0x0006	<b>Reserve</b>		
0x0007	<b>Reserve</b>		
0x0008	<b>Cool operation mode</b>	0-1	
	Setting for cooling between off and auto operation.		
0x0009	<b>Int. Night heat func.</b>	0-1	
	Setting for activating the intermittent night heat function.		
0x0010	<b>Damper func.</b>	0-1	
	Setting for activating the damper output relay during int. night heat.		
0x0011	<b>Summer night cooling</b>	0-1	
	Setting for activating the suumer night cool function.		
0x0012	<b>Temp displacement</b>	0-1	
	Setting for activating the external temperature displacement function.		
0x0013	<b>Outdoor temp compensation</b>	0-1	
	Setting for activating the outdoor temperature compensation function.		
0x0014	<b>Outdoor airflow compensation</b>	0-1	
	Setting for activating the outdoor airflow compensation function.		
0x0015	<b>Auto. Summer/winter switch</b>	0-1	
	Setting for activating the automatic switch between summer/winter time function.		
0x0016	<b>Switch clock func.</b>	0-1	
	Setting for switch clock function type. 0=Stop - low speed - high speed. 1=Low speed - high speed.		
0x0017	<b>Internal fire alarm func.</b>	0-1	
	Setting for activating the internal fire alarm function.		
0x0018	<b>EA at fire</b>	0-1	PV 3.00
	Setting for activating the extract air fan operation at fire function. (Moved to 4x0206 in PV 3.00)		
0x0019	<b>External alarm 1 active at closure</b>	0-1	
	Setting for external alarm number 1 condition to be activated. 0=Alarm at closed input. 1=Alarm at open input.		
0x0020	<b>External alarm 2 active at closure</b>	0-1	

**Coil Status. 1bit (R/W).**

Modbus	Name	Min/Max	Misc
	Setting for external alarm number 2 condition to be activated. 0=Alarm at closed input. 1=Alarm at open input.		
<b>0x0021</b>	<b>Reserve</b>		
<b>0x0022</b>	<b>Dewpoint reg. func.</b>	0-1	
	Setting for activating the dewpoint regulator funktion.		
<b>0x0023</b>	<b>Dehumid reg. func.</b>	0-1	
	Setting for activating the dehumid regulator funktion.		
<b>0x0024</b>	<b>External fire alarm func.</b>	0-1	PV 3.00
	Setting for external fire resetting function. 0=Manual. 1=Automatic.		
<b>0x0025</b>	<b>External alarm 1 func.</b>	0-1	PV 3.00
	Setting for external alarm 1 resetting function. 0=Manual. 1=Automatic.		
<b>0x0026</b>	<b>External alarm 2 func.</b>	0-1	PV 3.00
	Setting for external alarm 2 resetting function. 0=Manual. 1=Automatic.		
<b>0x0027</b>	<b>Temperature alarm func.</b>	0-1	PV 3.00
	Setting for activating temperature below setpoint alarm function (no.80).		
<b>0x0028</b>	<b>Int. Night heat output func.</b>	0-1	PV 5.00
	Setting for selecting the intermittent night heat output function. 0=IQnomic 1=IQnomic+		
<b>0x0029</b>	<b>AYC heat out comp. func.</b>	0-1	PV 5.07
	Setting for selecting the AYC outdoor comp. heated water function. 0=Inactive 1=Active		
<b>0x0030</b>	<b>AYC heat room comp. func.</b>	0-1	PV 5.07
	Setting for selecting the AYC room comp. heated water function. 0=Inactive 1=Active		
<b>0x0031</b>	<b>AYC heat room comp. night block func.</b>	0-1	PV 5.07
	Setting for selecting the AYC room comp. heated water night block function. 0=Inactive 1=Active		
<b>0x0032</b>	<b>AYC heat night comp. func.</b>	0-1	PV 5.07
	Setting for selecting the AYC night comp. heated water function. 0=Inactive 1=Active		
<b>0x0033</b>	<b>AYC heat valve signal func.</b>	0-1	PV 5.07
	Setting for selecting the AYC valve signal heated water alarm function. 0=Inactive 1=Active		
<b>0x0034</b>	<b>AYC cool out comp. func.</b>	0-1	PV 5.07

**Coil Status. 1bit (R/W).**

Modbus	Name	Min/Max	Misc
	Setting for selecting the AYC outdoor comp. chilled water function. 0=Inactive 1=Active		
<b>0x0035</b>	<b>AYC cool room comp. func.</b>	0-1	PV 5.07
	Setting for selecting the AYC room comp. chilled water function. 0=Inactive 1=Active		
<b>0x0036</b>	<b>AYC cool room comp. night block func.</b>	0-1	PV 5.07
	Setting for selecting the AYC room comp. chilled water night block function. 0=Inactive 1=Active		
<b>0x0037</b>	<b>AYC cool night comp. func.</b>	0-1	PV 5.07
	Setting for selecting the AYC night comp. chilled water function. 0=Inactive 1=Active		
<b>0x0038</b>	<b>AYC cool valve signal func.</b>	0-1	PV 5.07
	Setting for selecting the AYC valve signal chilled water alarm function. 0=Inactive 1=Active		

**Input Status. 1bit (RO).**

Modbus	Name	Min/Max	Misc
1x0001	<b>Heat output</b>	0-1	
	Status for relay output.		
1x0002	<b>Cool output 1</b>	0-1	
	Status for relay output.		
1x0003	<b>Cool output 2</b>	0-1	
	Status for relay output.		
1x0004	<b>Low speed output</b>	0-1	
	Status for relay output.		
1x0005	<b>High speed output</b>	0-1	
	Status for relay output.		
1x0006	<b>A-alarm.</b>	0-1	
	Status for relay output.		
1x0007	<b>B-alarm.</b>	0-1	
	Status for relay output.		
1x0008	<b>Operation output</b>	0-1	
	Status for relay output.		
1x0009	<b>Damper output</b>	0-1	
	Status for relay output.		
1x0010	<b>External low speed input</b>	0-1	
	Status for digital input.		
1x0011	<b>External high speed input</b>	0-1	
	Status for digital input.		
1x0012	<b>External alarm 1 input</b>	0-1	
	Status for digital input.		
1x0013	<b>External alarm 2 input</b>	0-1	
	Status for digital input.		
1x0014	<b>External fire alarm input.</b>	0-1	
	Status for digital input.		
1x0015	<b>External stop input</b>	0-1	
	Status for digital input.		
1x0016	<b>DIP Switch 1</b>	0-1	
	Status for dip switch setting.		
1x0017	<b>DIP Switch 2</b>	0-1	
	Status for dip switch setting.		
1x0018	<b>DIP Switch 3</b>	0-1	
	Status for dip switch setting.		
1x0019	<b>DIP Switch 4</b>	0-1	
	Status for dip switch setting.		
1x0020	<b>DIP Switch 5</b>	0-1	
	Status for dip switch setting.		
1x0021	<b>DIP Switch 6</b>	0-1	
	Status for dip switch setting.		
1x0022	<b>AYC heat pump output</b>	0-1	PV 5.07
	Status for AYC heat pump output.		
1x0023	<b>AYC cool pump output</b>	0-1	PV 5.07
	Status for AYC cool pump output.		
1x0024	<b>C.HX. pump output</b>	0-1	PV 2.00
	Status for coil heat exchanger pump output.		
1x0025	<b>R.HX rotation monitor</b>	0-1	PV 3.00
	Status from the rotation detector.		
1x0026	<b>Xzone heat output</b>	0-1	PV 5.00
	Status for relay output.		
1x0027	<b>Xzone cool output 1</b>	0-1	PV 5.00
	Status for relay output.		
1x0028	<b>Xzone cool output 2</b>	0-1	PV 5.00

**Input Status. 1bit (RO).**

Modbus	Name	Min/Max	Misc
	Status for relay output.		
1x0029	<b>Pre-heat output</b>	0-1	PV 5.00
	Status for relay output.		
1x0030	<b>IO-mod 3 output 1</b>	0-1	PV 5.07
	Status for I/O-module no. 3 relay 1 output.		
1x0031	<b>IO-mod 3 output 2</b>	0-1	PV 5.07
	Status for I/O-module no. 3 relay 2 output.		
1x0032	<b>Reserve 11</b>		
1x0033	<b>Reserve 12</b>		
1x0034	<b>Reserve 13</b>		
1x0035	<b>Reserve 14</b>		
1x0036	<b>Reserve 15</b>		
1x0037	<b>Reserve 16</b>		
1x0038	<b>Reserve 17</b>		
1x0039	<b>Reserve 18</b>		
1x0040	<b>Reserve 19</b>		
1x0041	<b>Reserve 20</b>		
1x0042	<b>Reserve 21</b>		
1x0043	<b>Reserve 22</b>		
1x0044	<b>Reserve 23</b>		
1x0045	<b>Reserve 24</b>		
1x0046	<b>Reserve 25</b>		
1x0047	<b>Reserve 26</b>		
1x0048	<b>Reserve 27</b>		
1x0049	<b>Alarm number 1</b>	0-1	
	Status if alarm number 1 is active.		
1x0050	<b>Alarm number 2</b>	0-1	
	Status if alarm number 2 is active.		
1x0051	<b>Alarm number 3</b>	0-1	
	Status if alarm number 3 is active.		
1x0248	<b>Alarm number 200</b>	0-1	PV 5.00
	Status if alarm number 200 is active.		
1x0249	<b>Info number 1</b>	0-1	PV 5.00
	Status if info number 1 is active.		
1x0250	<b>Info number 2</b>	0-1	PV 5.00

**Input Status. 1bit (RO).**

Modbus	Name	Min/Max	Misc
	Status if info number 2 is active.		
<b>1x0251</b>	<b>Info number 3</b>	0-1	PV 5.00
	Status if info number 3 is active.		
<b>1x0348</b>	<b>Info number 100</b>	0-1	PV 5.00
	Status if info number 100 is active.		

**Input Registers. 16-bit integer value (RO).**

Modbus	Name	Min/Max	Misc
3x0001	<b>SA Airflow</b>	0-8200l/s	
	Present supply airflow.		
3x0002	<b>SA Airflow regulator</b>	0-8200l/s	
	Present supply airflow regulator setpoint.		
3x0003	<b>EA Airflow</b>	0-8200l/s	
	Present extract airflow.		
3x0004	<b>EA Airflow regulator</b>	0-8200l/s	
	Present extract airflow regulator setpoint.		
3x0005	<b>SA Duct pressure</b>	0-2000Pa	
	Present supply air duct pressure.		
3x0006	<b>SA Duct pressure regulator</b>	0-2000Pa	
	Present supply air duct pressure regulator setpoint.		
3x0007	<b>EA Duct pressure</b>	0-2000Pa	
	Present extract air duct pressure.		
3x0008	<b>EA Duct pressure regulator</b>	0-2000Pa	
	Present extract air duct pressure regulator setpoint.		
3x0009	<b>SA VAV demand/boost input</b>	0-100.00%	
	Present input signal for supply air VAV demand or boosting function.		
3x0010	<b>SA VAV demand regulator</b>	0-100.00%	
	Present supply air VAV demand regulator setpoint.		
3x0011	<b>EA VAV demand/boost input</b>	0-100.00%	
	Present input signal for extract air VAV demand or boosting function.		
3x0012	<b>EA VAV demand regulator</b>	0-100.00%	
	Present supply air VAV demand regulator setpoint.		
3x0013	<b>SA Fan level</b>	0-100.00%	
	Present running level for the supply air fan.		
3x0014	<b>EA Fan level</b>	0-100.00%	
	Present running level for the extract air fan.		
3x0015	<b>SA Fan effect</b>	0-6500W	
	Present power consumption level for the supply air fan.		
3x0016	<b>EA Fan effect</b>	0-6500W	
	Present power consumption level for the extract air fan.		
3x0017	<b>SFP</b>	0.0-9.9	
	SFP supply air + extract air.		
3x0018	<b>SA Frequency</b>	0-100.00Hz	
	Present frequency level for the supply air fan.		
3x0019	<b>EA Frequency</b>	0-100.00Hz	
	Present frequency level for the extract air fan.		
3x0020	<b>SA Voltage</b>	0-500V	
	Present voltage level for the supply air fan.		
3x0021	<b>EA Voltage</b>	0-500V	
	Present voltage level for the extract air fan.		
3x0022	<b>SA Current</b>	0-30.000A	
	Present current level for the supply air fan.		
3x0023	<b>EA Current</b>	0-30.000A	
	Present current level for the extract air fan.		
3x0024	<b>SA Airflow pressure</b>	0-2000Pa	
	Present airflow pressure in the supply air fan inlet.		
3x0025	<b>EA Airflow pressure</b>	0-2000Pa	
	Present airflow pressure in the extract air fan inlet.		
3x0026	<b>SA Temp regulator</b>	-55.00-125.00°C	
	Present supply air temperature regulator setpoint.		
3x0027	<b>EA Temp regulator</b>	-55.00-125.00°C	

**Input Registers. 16-bit integer value (RO).**

Modbus	Name	Min/Max	Misc
	Present extract air temperature regulator setpoint.		
<b>3x0028</b>	<b>SA Temperature</b>	-55.00-125.00°C	
	Present supply air temperature.		
<b>3x0029</b>	<b>EA/Room temperature</b>	-55.00-125.00°C	
	Present extract air/room temperature in the unit.		
<b>3x0030</b>	<b>Outdoor temperatur</b>	-55.00-125.00°C	
	Present outdoor air temperature in the unit.		
<b>3x0031</b>	<b>EA/Room temperature (external)</b>	-55.00-125.00°C	
	Present room temperature external from the unit.		
<b>3x0032</b>	<b>Outdoor temperatur (external)</b>	-55.00-125.00°C	
	Present outdoor air temperature external from the unit.		
<b>3x0033</b>	<b>Anti frost temperature</b>	-55.00-125.00°C	
	Present anti frost temperature for water reheating coils.		
<b>3x0034</b>	<b>Temperature sensor 3</b>	-55.00-125.00°C	
	Present temperature for temp sensor no.3		
<b>3x0035</b>	<b>Temperature sensor 4</b>	-55.00-125.00°C	
	Present temperature for temp sensor no.4		
<b>3x0036</b>	<b>Rotary heat exchanger level</b>	0-100.00%	
	Present operation level from rotary heat exchanger.		
<b>3x0037</b>	<b>Reheat level</b>	0-100.00%	
	Present level of reheat.		
<b>3x0038</b>	<b>SA Down regulation level</b>	0-100.00%	
	Present level of supply airflow down regulation.		
<b>3x0039</b>	<b>Extre regulation sequence level</b>	0-100.00%	
	Present level of the extra regulation sequence.		
<b>3x0040</b>	<b>Cooling level</b>	0-100.00%	
	Present level of cooling.		
<b>3x0041</b>	<b>Heating boost level</b>	0-100.00%	
	Present level of heating boost.		
<b>3x0042</b>	<b>Cooling boost level</b>	0-100.00%	
	Present level of cooling boost.		
<b>3x0043</b>	<b>HX pressure level</b>	0-2000Pa	
	Present pressure drop for the rotary heat exchanger.		
<b>3x0044</b>	<b>HX pressure alarm limit</b>	0-2000Pa	
	Present pressure drop alarm limit for the rotary heat exchanger.		
<b>3x0045</b>	<b>HX temperature</b>	0-100.00°C	
	Present temperature inside the control unit for the rotary heat exchanger.		
<b>3x0046</b>	<b>Effect reduction level</b>	0-100.00%	
	Present level of max output signal for electrical reheaters, active during low supply airflow.		
<b>3x0047</b>	<b>Anti frost temp setpoint/operation</b>	10.00-16.00°C	
	Present anti frost temperature setpoint for water reheating coils during unit operation.		
<b>3x0048</b>	<b>Anti frost temp setpoint/stop</b>	15.00-40.00°C	
	Present anti frost temperature setpoint for water reheating coils when the unit is in stop.		
<b>3x0049</b>	<b>Anti frost temp alarm limit</b>	5.00-30.00°C	
	Setting of antifrost temperature alarm limit.		
<b>3x0050</b>	<b>Supply air filter pressure level</b>	0-2000Pa	
	Present supply air filter pressure drop.		
<b>3x0051</b>	<b>Supply air filter pressure alarm limit.</b>	0-2000Pa	
	Present supply air filter pressure alarm limit.		
<b>3x0052</b>	<b>Supply air filter pressure level, new</b>	0-2000Pa	

**Input Registers. 16-bit integer value (RO).**

Modbus	Name	Min/Max	Misc
	Supply air filter pressure saved from calibration.		
<b>3x0053</b>	<b>Extract air filter pressure level</b>	0-2000Pa	
	Present extract air filter pressure drop.		
<b>3x0054</b>	<b>Extract air filter pressure alarm limit.</b>	0-2000Pa	
	Present extract air filter pressure alarm limit.		
<b>3x0055</b>	<b>Extract air filter pressure level, new</b>	0-2000Pa	
	Extract air filter pressure saved from calibration.		
<b>3x0056</b>	<b>Temperature displacement</b>	-5.00 - 5.00°C	
	Present temperature displacement from input signal.		
<b>3x0057</b>	<b>Coil type</b>	0-20	
	Present connected reheat coil type.		
<b>3x0058</b>	<b>Cool step time</b>	0-600s	
	Present time between cool step shift.		
<b>3x0059</b>	<b>Cool relay 1 restart time</b>	0-900s	
	Present time between two starts of cool relay 1.		
<b>3x0060</b>	<b>Cool relay 2 restart time</b>	0-900s	
	Present time between two starts of cool relay 2.		
<b>3x0061</b>	<b>Programversion, HMI</b>	0-10.00	
	Present programversion for the handterminal.		
<b>3x0062</b>	<b>Programversion, HMI-slave</b>	0-10.00	
	Present programversion for the extra handterminal.		
<b>3x0063</b>	<b>Programversion, main controller.</b>	0-10.00	
	Present programversion for the main control unit.		
<b>3x0064</b>	<b>Programversion, SA FC-1.</b>	0-10.00	
	Present programversion for the supply air frequency converter no.1.		
<b>3x0065</b>	<b>Programversion, SA FC-2.</b>	0-10.00	
	Present programversion for the supply air frequency converter no.2.		
<b>3x0066</b>	<b>Programversion, EA FC-1.</b>	0-10.00	
	Present programversion for the extract air frequency converter no.1.		
<b>3x0067</b>	<b>Programversion, EA FC-2.</b>	0-10.00	
	Present programversion for the extract air frequency converter no.2.		
<b>3x0068</b>	<b>Programversion, HX control unit</b>	0-10.00	
	Present programversion for the rotary heat exchange control unit.		
<b>3x0069</b>	<b>Weekday</b>	0 - 6	
	Present weekday for the unit's internal clock.		
<b>3x0070</b>	<b>Extended low speed op. Hours</b>	0-23	
	Present time for extended low speed operation.		
<b>3x0071</b>	<b>Extended low speed op. Minutes</b>	0-59	
	Present time for extended low speed operation.		
<b>3x0072</b>	<b>Extended high speed op. Hours</b>	0-23	
	Present time for extended high speed operation.		
<b>3x0073</b>	<b>Extended high speed op. Minutes</b>	0-59	
	Present time for extended high speed operation.		
<b>3x0074</b>	<b>SA Fan operation time</b>	0-9999	
	Present operation time for the supply air fan, measured in minutes and present in days (24h).		
<b>3x0075</b>	<b>EA Fan operation time</b>	0-9999	
	Present operation time for the extract air fan, measured in minutes and present in days (24h).		
<b>3x0076</b>	<b>Cool operation time</b>	0-9999	

**Input Registers. 16-bit integer value (RO).**

Modbus	Name	Min/Max	Misc
	Present operation time for cooling, measured in minutes and present in days (24h).		
<b>3x0077</b>	<b>Heat exchange operation time</b>	0-9999	
	Present operation time for heat exchange, measured in minutes and present in days (24h).		
<b>3x0078</b>	<b>Reheat operation time</b>	0-9999	
	Present operation time for reheat, measured in minutes and present in days (24h).		
<b>3x0079</b>	<b>Present tripped alarm</b>	0-200	PV 5.00
	Present tripped alarm number with highest priority.		
<b>3x0080</b>	<b>Active not tripped alarm no.1</b>	0-200	PV 5.00
	Present active alarm in delay.		
<b>3x0081</b>	<b>Active not tripped alarm no.2</b>	0-200	PV 5.00
	Present active alarm in delay.		
<b>3x0082</b>	<b>Active not tripped alarm no.3</b>	0-200	PV 5.00
	Present active alarm in delay.		
<b>3x0083</b>	<b>SA Fan size</b>	04 - 80	
	Present supply air fan size.		
<b>3x0084</b>	<b>EA Fan size</b>	04 - 80	
	Present extract air fan size.		
<b>3x0085</b>	<b>Operation mode 1</b>	0 - 18	PV 5.00
	0=Manual stop. 1=Ext. stop. 2=Com. stop 1. 3=Manual high speed. 4=Summer night cooling. 5=Int. night heat. 6=Manual low speed. 7=Ext. high speed. 8=Com. high speed. 9=Year channel stop. 10=Year channel high speed. 11=Year channel low speed. 12=Time channel high speed. 13=Ext. low speed. 14=Com. low speed. 15=Time channel low speed. 16=Time channel stop. 17=Low speed=stop. 18=Com. stop 2. (New in PV 5.00)		
<b>3x0086</b>	<b>Operation mode 2</b>	0 - 22	PV 5.00

**Input Registers. 16-bit integer value (RO).**

Modbus	Name	Min/Max	Misc
	0= 1=Cool air recovery. 2=Cooling boost. 3=SA down regulation. 4=HX defrosting. 5=Anti frost func. active. 6=Effect reduction. 7=Startup. 8=Zero calibration. 9=Extended low speed. 10=Extended high speed. 11=Air adjustment. 12=Cooling off. 13=Purging R.HX. 14=Extended R.HX. op. 15=Filter calibration. 16=R.HX. calibration 17=Morning boost. 18=Heating boost. 19=Alarm. 20=CoolDX pressure reduction. (PV 2.00) 21=Startup extract air fan (New in 4.00) R.HX speed limited. (Only in PV 2.00-2.02) 22=Fan heat retention (New in PV 5.00)		
<b>3x0087</b>	<b>Operation mode, manual</b>	0 - 3	
	Present manual operation set on the unit's handterminal. 0=Stop. 1=Auto operation. 2=Manual low speed. 3=Manual high speed.		
<b>3x0088</b>	<b>Copy of Input Status 1-16.</b>	0-65535	
	Bit 0=1x0001 Bit 1=1x0002 Bit 15=1x0016		
<b>3x0089</b>	<b>Copy of Input Status 17-32.</b>	0-65535	
	Bit 0=1x00017 Bit 1=1x00018 Bit 15=1x0032		
<b>3x0090</b>	<b>Copy of Input Status 33-48.</b>	0-65535	
	Bit 0=1x00033 Bit 1=1x00034 Bit 15=1x0048		
<b>3x0091</b>	<b>Heat exchanger regulator</b>	0-100.00%	
	Present level of heat exchanger regulator RX/CX/PX.		
<b>3x0092</b>	<b>Extract air-humidity</b>	0-100.00%	
	Present level of extract air-humidity.		
<b>3x0093</b>	<b>Extract air-humidity temperature</b>	-55.00-125.00°C	
	Present temperature inside extract air-humidity sensor.		
<b>3x0094</b>	<b>Extract air-dewpoint</b>	-55.00-125.00°C	
	Calculated extract air-dewpoint.		
<b>3x0095</b>	<b>AYC chilled water temperature</b>	-55.00-125.00°C	
	Present AYC chilled water temperature.		
<b>3x0096</b>	<b>AYC chilled water temperature regulator</b>	-55.00-125.00°C	
	Present AYC chilled water temperature regulator setpoint.		

**Input Registers. 16-bit integer value (RO).**

Modbus	Name	Min/Max	Misc
3x0097	<b>AYC chilled water output</b>	0-100.00%	
	Present level of AYC chilled water valve output.		
3x0098	<b>Supply air-dewpoint regulator</b>	-55.00-125.00°C	
	Present supply air-dewpoint regulator setpoint.		
3x0099	<b>Supply air-humidity</b>	0-100.00%	
	Present level of supply air-humidity		
3x0100	<b>Supply air-humidity temperature</b>	-55.00-125.00°C	
	Present temperature inside supply air-humidity sensor.		
3x0101	<b>Supply air-dewpoint</b>	-55.00-125.00°C	
	Calculated supply air-dewpoint.		
3x0102	<b>C.HX. Temperature</b>	-55.00-125.00°C	PV 2.00
	Present temperature of coil heat exchanger.		
3x0103	<b>P.HX. Temperature 1</b>	-55.00-125.00°C	PV 2.00
	Present temperature 1 of plate heat exchanger.		
3x0104	<b>P.HX. Temperature 2</b>	-55.00-125.00°C	PV 2.00
	Present temperature 2 of plate heat exchanger.		
3x0105	<b>P/C.HX. Humidity</b>	0-100.00%	PV 2.00
	Present level of air-humidity in plate/coil heat exchanger.		
3x0106	<b>R.HX. Efficiency</b>	0-100.00%	PV 2.00
	Calculated level of rotary heat exchanger efficiency.		
3x0107	<b>C.HX. Valve output</b>	0-100.00%	PV 5.00
	Present level of coil heat exchanger valve output.		
3x0108	<b>P.HX bypass output</b>	0-100.00%	PV 5.00
	Present level of plate heat exchanger bypass output.		
3x0109	<b>Supply air prefilter pressure level</b>	0-2000Pa	PV 5.00
	Present supply air prefilter pressure drop.		
3x0110	<b>Supply air prefilter pressure alarm limit.</b>	0-2000Pa	PV 5.00
	Present supply air prefilter pressure alarm limit.		
3x0111	<b>Supply air prefilter pressure level, new</b>	0-2000Pa	PV 5.00
	Supply air prefilter pressure saved from calibration.		
3x0112	<b>Extract air prefilter pressure level</b>	0-2000Pa	PV 5.00
	Present extract air prefilter pressure drop.		
3x0113	<b>Extract air prefilter pressure alarm limit.</b>	0-2000Pa	PV 5.00
	Present extract air prefilter pressure alarm limit.		
3x0114	<b>Extract air prefilter pressure level, new</b>	0-2000Pa	PV 5.00
	Extract air prefilter pressure saved from calibration.		
3x0115	<b>Xzone reheat level</b>	0-100.00%	PV 5.00
	Present level of Xzone reheat.		
3x0116	<b>Xzone anti frost temperature</b>	-55.00-125.00°C	PV 5.00
	Present Xzone anti frost temperature for water reheating coils.		
3x0117	<b>Xzone cooling level</b>	0-100.00%	PV 5.00
	Present level of Xzone cooling.		
3x0118	<b>Xzone cool step time</b>	0-600s	PV 5.00
	Present time between Xzone cool step shift.		
3x0119	<b>Xzone cool relay 1 restart time</b>	0-900s	PV 5.00
	Present time between two starts of Xzone cool relay 1.		
3x0120	<b>Xzone cool relay 2 restart time</b>	0-900s	PV 5.00
	Present time between two starts of Xzone cool relay 2.		
3x0121	<b>Xzone SA Temp regulator</b>	-55.00-125.00°C	PV 5.00
	Present Xzone supply air temperature regulator setpoint.		
3x0122	<b>Xzone EA Temp regulator</b>	-55.00-125.00°C	PV 5.00
	Present Xzone extract air temperature regulator setpoint.		
3x0123	<b>Xzone SA Temperature</b>	-55.00-125.00°C	PV 5.00

**Input Registers. 16-bit integer value (RO).**

Modbus	Name	Min/Max	Misc
	Present Xzone supply air temperature.		
<b>3x0124</b>	<b>Xzone EA/Room temperature</b>	-55.00-125.00°C	PV 5.00
	Present Xzone extract air/room temperature.		
<b>3x0125</b>	<b>Pre-heating air temperature</b>	-55.00-125.00°C	PV 5.00
	Present pre-heating air temperature.		
<b>3x0126</b>	<b>Pre-heating level</b>	0-100.00%	PV 5.00
	Present level of pre-heating.		
<b>3x0127</b>	<b>Pre-heating anti frost temperature</b>	-55.00-125.00°C	PV 5.00
	Present anti frost temperature for water pre-heating coils.		
<b>3x0128</b>	<b>ReCO2 CO2 input</b>	0-100.00%	PV 5.00
	Present input signal for ReCO2 CO2.		
<b>3x0129</b>	<b>ReCO2 internal damper output</b>	0-100.00%	PV 5.00
	Present output signal for ReCO2 internal damper.		
<b>3x0130</b>	<b>ReCO2 external damper output</b>	0-100.00%	PV 5.00
	Present output signal for ReCO2 external damper.		
<b>3x0131</b>	<b>ReCO2 outdoor airflow</b>	0-8200l/s	PV 5.00
	Present ReCO2 outdoor airflow.		
<b>3x0132</b>	<b>ReCO2 outdoor airflow regulator</b>	0-8200l/s	PV 5.00
	Present ReCO2 outdoor airflow regulator setpoint.		
<b>3x0133</b>	<b>ReCO2 outdoor airflow pressure</b>	0-2000Pa	PV 5.00
	Present ReCO2 outdoor airflow pressure.		
<b>3x0134</b>	<b>Preheat operation time</b>	0-9999	PV 5.00
	Present operation time for preheat, measured in minutes and present in days (24h).		
<b>3x0135</b>	<b>Xzone cool operation time</b>	0-9999	PV 5.00
	Present operation time for Xzone cooling, measured in minutes and present in days (24h).		
<b>3x0136</b>	<b>Xzone reheat operation time</b>	0-9999	PV 5.00
	Present operation time for Xzone reheat, measured in minutes and present in days (24h).		
<b>3x0137</b>	<b>Supply air-D temperature</b>	-55.00-125.00°C	PV 5.07
	Present supply air-D temperature.		
<b>3x0138</b>	<b>Extract air-D temperature</b>	-55.00-125.00°C	PV 5.07
	Present extract air-D temperature.		
<b>3x0139</b>	<b>AYC heat temperature</b>	-55.00-125.00°C	PV 5.07
	Present AYC heat temperature.		
<b>3x0140</b>	<b>AYC heat temp regulator</b>	-55.00-125.00°C	PV 5.07
	Present AYC heat temperature regulator setpoint.		
<b>3x0141</b>	<b>AYC heat valve output</b>	0-100.00%	PV 5.07
	Present level of AYC heat valve output.		

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
4x0001	<b>SA Low speed airflow setpoint</b>	0-8200l/s	
	Supply airflow setpoint for the unit when running in low speed operation.		
4x0002	<b>SA High speed airflow setpoint</b>	0-8200l/s	
	Supply airflow setpoint for the unit when running in high speed operation.		
4x0003	<b>SA Max speed airflow setpoint</b>	0-8200l/s	
	Supply airflow max. limit for the unit when the low/high speed operation setpoint is altered by boosting function etc.		
4x0004	<b>SA Min speed airflow setpoint</b>	0-8200l/s	
	Supply airflow min. limit for the unit when the low/high speed operation setpoint is altered when running in fan regulation mode VAV demand.		
4x0005	<b>EA Low speed airflow setpoint</b>	0-8200l/s	
	Extract airflow setpoint for the unit when running in low speed operation.		
4x0006	<b>EA High speed airflow setpoint</b>	0-8200l/s	
	Extract airflow setpoint for the unit when running in high speed operation.		
4x0007	<b>EA Max speed airflow setpoint</b>	0-8200l/s	
	Extract airflow max. limit for the unit when the low/high speed operation setpoint is altered by boosting function etc.		
4x0008	<b>EA Min speed airflow setpoint</b>	0-8200l/s	
	Extract airflow min. limit for the unit when the low/high speed operation setpoint is altered when running in fan regulation mode VAV demand.		
4x0009	<b>SA Low speed pressure setpoint</b>	0-750Pa	
	Supply air duct pressure setpoint for the unit when running in low speed operation.		
4x0010	<b>SA High speed pressure setpoint</b>	20-750Pa	
	Supply air duct pressure for the unit when running in high speed operation.		
4x0011	<b>SA Max speed output signal</b>	10.00-100.00%	
	Max. limit for the supply air fan speed when running in pressure regulation mode.		
4x0012	<b>SA Max speed pressure setpoint</b>	20-750Pa	
	Supply air duct pressure max. limit for the unit when the low/high speed operation setpoint is altered by boosting function etc.		
4x0013	<b>EA Low speed pressure setpoint</b>	0-750Pa	
	Extract air duct pressure setpoint for the unit when running in low speed operation.		
4x0014	<b>EA High speed pressure setpoint</b>	20-750Pa	
	Extract air duct pressure setpoint for the unit when running in high speed operation.		
4x0015	<b>EA Max speed output signal</b>	10.00-100.00%	
	Max. limit for the extract air fan speed when running in pressure regulation mode.		
4x0016	<b>EA Max speed pressure setpoint</b>	20-750Pa	
	Extract air duct pressure max. limit for the unit when the low/high speed operation setpoint is altered by boosting function etc.		
4x0017	<b>SA Low speed demand setpoint</b>	0-100.00%	

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
	Supply air setpoint for the 0-10V input signal on terminal 30..31 for the unit when running in low speed operation.		
<b>4x0018</b>	<b>SA High speed demand setpoint</b>	0-100.00%	
	Supply air setpoint for the 0-10V input signal on terminal 30..31 for the unit when running in high speed operation.		
<b>4x0019</b>	<b>EA Low speed demand setpoint</b>	0-100.00%	
	Extract air setpoint for the 0-10V input signal on terminal 32..33 for the unit when running in low speed operation.		
<b>4x0020</b>	<b>EA High speed demand setpoint</b>	0-100.00%	
	Extract air setpoint for the 0-10V input signal on terminal 32..33 for the unit when running in high speed operation.		
<b>4x0021</b>	<b>SA Airflow regulation zone</b>	1.00 - 10.00	
	Supply airflow regulation zone setting in % of the present airflow setpoint that the regulator is allowed to work within.		
<b>4x0022</b>	<b>SA Airflow C-factor</b>	0.005 - 2.500	
	Supply airflow regulator affection setting.		
<b>4x0023</b>	<b>EA Airflow regulation zone</b>	1.00 - 10.00	
	Extract airflow regulation zone setting in % of the present airflow setpoint that the regulator is allowed to work within.		
<b>4x0024</b>	<b>EA Airflow C-factor</b>	0.005 - 2.500	
	Extract airflow regulator affection setting.		
<b>4x0025</b>	<b>SA Pressure regulation zone</b>	1.00 - 10.00	
	Supply air pressure regulation zone setting in % of the present duct pressure setpoint that the regulator is allowed to work within.		
<b>4x0026</b>	<b>SA Pressure C-factor</b>	0.005 - 2.500	
	Supply air pressure regulator affection setting.		
<b>4x0027</b>	<b>EA Pressure regulation zone</b>	1.00 - 10.00	
	Extract air pressure regulation zone setting in % of the present duct pressure setpoint that the regulator is allowed to work within.		
<b>4x0028</b>	<b>EA Pressure C-factor</b>	0.005 - 2.500	
	Extract air pressure regulator affection setting.		
<b>4x0029</b>	<b>SA Demand P-band.</b>	1.00 - 100.00	
	Supply air demand regulator P-band setting.		
<b>4x0030</b>	<b>SA Demand C-factor</b>	0.005 - 2.500	
	Supply air demand regulator affection setting.		
<b>4x0031</b>	<b>EA Demand P-band.</b>	1.00 - 100.00	
	Extract air demand regulator P-band setting.		
<b>4x0032</b>	<b>EA Demand C-factor</b>	0.005 - 2.500	
	Extract air demand regulator affection setting.		
<b>4x0033</b>	<b>ERS 1 Diff</b>	1.00 - 7.00°C	
	Supply air temperature difference setting according to the diagram for ERS 1.		
<b>4x0034</b>	<b>ERS 1 Breakpoint</b>	12.00 - 26.00°C	
	Breakpoint setting according to the diagram for ERS 1.		
<b>4x0035</b>	<b>ERS 2 Breakpoint X1</b>	10.00-38.00°C	
	Breakpoint X1 setting according to the diagram for ERS 2.		
<b>4x0036</b>	<b>ERS 2 Breakpoint Y1</b>	10.00-40.00°C	
	Breakpoint Y1 setting according to the diagram for ERS 2.		
<b>4x0037</b>	<b>ERS 2 Breakpoint X2</b>	11.00-39.00°C	
	Breakpoint X2 setting according to the diagram for ERS 2.		
<b>4x0038</b>	<b>ERS 2 Breakpoint Y2</b>	10.00-40.00°C	
	Breakpoint Y2 setting according to the diagram for ERS 2.		

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
4x0039	<b>ERS 2 Breakpoint X3</b>	12.00-40.00°C	
	Breakpoint X3 setting according to the diagram for ERS 2.		
4x0040	<b>ERS 2 Breakpoint Y3</b>	10.00-40.00°C	
	Breakpoint Y3 setting according to the diagram for ERS 2.		
4x0041	<b>SA Temperature setpoint</b>	10.00-40.00°C	
	Supply air temperature setting, for supply air temp regulation mode.		
4x0042	<b>EA/Room Temperature setpoint</b>	10.00-40.00°C	
	Extract air/room temperature setting, for Extract air/room temp regulation mode.		
4x0043	<b>SA Min temp setpoint</b>	8.00-20.00°C	
	Supply air min.setpoint during EA/room regulation mode.		
4x0044	<b>SA Max temp setpoint</b>	16.00-50.00°C	
	Supply air max.setpoint during EA/room regulation mode.		
4x0045	<b>SA Temperature P-band</b>	1.00 - 40.00	PV 5.00
	Supply air temperature regulator P-band setting.		
4x0046	<b>EA/Room Temperature P-band</b>	1.00 - 40.00	PV 5.00
	Extract air/room temperature regulator P-band setting.		
4x0047	<b>SA HX. Reg C-factor</b>	0.000 - 2.500	
	Supply air heat exchange regulator affection setting.		
4x0048	<b>EA/Room HX. Reg C-factor</b>	0.000 - 2.500	
	Extract air/room heat exchange regulator affection setting.		
4x0049	<b>SA Heat Reg C-factor</b>	0.000 - 2.500	
	Supply air reheat regulator affection setting.		
4x0050	<b>EA/Room Heat Reg C-factor</b>	0.000 - 2.500	
	Extract air/room reheat regulator affection setting.		
4x0051	<b>SA Extra Reg heat C-factor</b>	0.000 - 2.500	
	Supply air extra regulation sequence for reheating regulator affection setting.		
4x0052	<b>SA Extra Reg cool C-factor</b>	0.000 - 2.500	
	Supply air extra regulation sequence for cooling regulator affection setting.		
4x0053	<b>EA Extra Reg heat C-factor</b>	0.000 - 2.500	
	Extract air extra regulation sequence for reheating regulator affection setting.		
4x0054	<b>EA Extra Reg cool C-factor</b>	0.000 - 2.500	
	Extract air extra regulation sequence for cooling regulator affection setting.		
4x0055	<b>SA Down regulation Reg C-factor</b>	0.000 - 2.500	
	Supply air reheat regulator affection setting.		
4x0056	<b>Reserve</b>		
4x0057	<b>SA Cool reg C-factor</b>	0.000 - 2.500	
	Supply air cool regulator affection setting.		
4x0058	<b>EA/Room Cool reg C-factor</b>	0.000 - 2.500	
	Extract air/room cool regulator affection setting.		
4x0059	<b>SA Cooling boost C-factor</b>	0.000 - 2.500	

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
	Supply air cooling boost affection setting.		
<b>4x0060</b>	<b>EA/Room Cooling boost reg C-factor</b>	0.000 - 2.500	
	Extract air/room cooling boost regulator affection setting.		
<b>4x0061</b>	<b>HX Pressure alarm set.</b>	30 - 100Pa	
	Heat exchange pressure alarm limit setting (alarm no.38).		
<b>4x0062</b>	<b>P/C.HX. defrost P-band</b>	1.00 - 40.00	PV 2.00
	Plate/coil heat exchange defrost P-band setting.		
<b>4x0063</b>	<b>P/C.HX. defrost C-factor</b>	0.000 - 2.500	PV 2.00
	Plate/coil heat exchange defrost C-factor setting.		
<b>4x0064</b>	<b>Cooling off set.</b>	10 - 50%	
	Cooling off airflow setting in % of max. airflow.		
<b>4x0065</b>	<b>SA Down regulation neautral zone</b>	0.00-10.00°C	
	Neutral zone setting before downregulation is permitted.		
<b>4x0066</b>	<b>Cool Outdoor temp limit.1</b>	0.00-25.00°C	
	Outdoor temperature limit setting for cooling stage 1.		
<b>4x0067</b>	<b>Cool Outdoor temp limit.2</b>	0.00-25.00°C	
	Outdoor temperature limit setting for cooling stage 2.		
<b>4x0068</b>	<b>Cool Outdoor temp limit.3</b>	0.00-25.00°C	
	Outdoor temperature limit setting for cooling stage 3.		
<b>4x0069</b>	<b>Temperature reg. Neutral zone</b>	0.50-10.00°C	
	Neutral zone setting before shift between heating and cooling.		
<b>4x0070</b>	<b>SA Cool min air flow</b>	0-8200l/s	
	Supply air min. air flow setting for cooling.		
<b>4x0071</b>	<b>EA Cool min air flow</b>	0-8200l/s	
	Extract air min. air flow setting for cooling.		
<b>4x0072</b>	<b>Heating boost start limit</b>	0.00-40.00°C	
	Heating boost start temperature limit.		
<b>4x0073</b>	<b>Cooling boost start limit</b>	0.00-40.00°C	
	Cooling boost (comfort) start temperature limit.		
<b>4x0074</b>	<b>SA Filter alarm limit</b>	50-300Pa	
	Supply air filter pressure alarm limit setting.		
<b>4x0075</b>	<b>EA Filter alarm limit</b>	50-300Pa	
	Extract air filter pressure alarm limit setting.		
<b>4x0076</b>	<b>Int. Night heat room start temp</b>	5.00-25.00°C	
	Intermittent night heat function, extract air temperature setting for start.		
<b>4x0077</b>	<b>Int. Night heat room stop temp</b>	5.00-25.00°C	
	Intermittent night heat function, extract air temperature setting for stop.		
<b>4x0078</b>	<b>Int. Night heat SA temp setpoint</b>	5.00-40.00°C	
	Intermittent night heat function, supply air temperature setpoint during night heat.		
<b>4x0079</b>	<b>Int. Night heat SA airflow setpoint</b>	0-8200l/s	
	Intermittent night heat function, supply airflow setpoint during night heat.		
<b>4x0080</b>	<b>Int. Night heat EA airflow setpoint</b>	0-8200l/s	
	Intermittent night heat function, extract airflow setpoint during night heat.		
<b>4x0081</b>	<b>Summer night cool EA start temp</b>	17.00-27.00°C	
	Summer night cool function, extract air temperature setting for start.		

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
4x0082	<b>Summer night cool EA stop temp</b>	12.00-22.00°C	
	Summer night cool function, extract air temperature setting for stop.		
4x0083	<b>Summer night cool outdoor temp limit</b>	5.00-15.00°C	
	Summer night cool function, outdoor temperature limit.		
4x0084	<b>Summer night cool SA temp setpoint</b>	10.00-20.00°C	
	Summer night cool function, supply air temperature setpoint during summer night cool.		
4x0085	<b>Outdoor temp comp. Winter X1.</b>	-30.00-(-10.00)°C	
	Endpoint of winter compensation.		
4x0086	<b>Outdoor temp comp. Winter X2.</b>	-10.00-15.00°C	
	Startpoint of winter compensation.		
4x0087	<b>Outdoor temp comp. Winter Y1.</b>	0.00-10.00°C	
	Level of winter compensation at X1.		
4x0088	<b>Outdoor temp comp. Summer X3.</b>	15.00-25.00°C	
	Startpoint of summer compensation.		
4x0089	<b>Outdoor temp comp. Summer X4.</b>	25.00-40.00°C	
	Endpoint of summer compensation.		
4x0090	<b>Outdoor temp comp. Summer Y2.</b>	-10.00-10.00°C	
	Level of summer compensation at X4.		
4x0091	<b>Outdoor airflow comp. Winter X1.</b>	-30.00-(-10.00)°C	
	Endpoint of winter compensation.		
4x0092	<b>Outdoor airflow comp. Winter X2.</b>	-10.00-15.00°C	
	Startpoint of winter compensation.		
4x0093	<b>Outdoor airflow comp. Winter Y1.</b>	0-50.00%	
	Level of airflow compensation at X1.		
4x0094	<b>Extra Reg. Sequence max output</b>	0-100.00%	
	Maximum output signal setting for the extra regulation sequence.		
4x0095	<b>EA/Room min temp alarm limit</b>	8.00-20.00°C	
	Setting for min extract air /room temp alarm no.40.		
4x0096	<b>SA Deviation alarm limit</b>	2.00-15.00°C	
	Setting for supply air temperature below present setpoint, alarm no.41.		
4x0097	<b>Reserve</b>		
4x0098	<b>SA Fan regulation mode</b>	0 - 3	
	Setting of regulation type for the supply air fan. 0=Airflow reg. 1=Pressure reg. 2=Demand reg. 3=Slave controlled by EA fan.		
4x0099	<b>EA Fan regulation mode</b>	0 - 3	
	Setting of regulation type for the extract air fan. 0=Airflow reg. 1=Pressure reg. 2=Demand reg. 3=Slave controlled by SA fan.		
4x0100	<b>ERS Step</b>	1 - 4	
	Setting of curve when temperature is above breakpoint.		
4x0101	<b>Temperature regulation mode.</b>	0 - 3	

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
	Setting of temperature regulation type. 0=ERS 1 reg. 1=ERS 2 reg. 2=SA reg. 3=EA/Room reg.		
<b>4x0102</b>	<b>Cooling off periode</b>	60 - 900s	
	Time setting for cooling off electrical heating coil.		
<b>4x0103</b>	<b>Cool step time</b>	0 - 600s	
	Time setting between cool step shift.		
<b>4x0104</b>	<b>Cool restart time</b>	60 - 900s	
	Setting of time between two starts of the cool relays.		
<b>4x0105</b>	<b>Cool regulation mode</b>	0 - 6	PV 3.00
	Setting of cool regulation type 0=Controlled 0-10V 1=Controlled 10-0V 2=On/Off 1-step 3=On/Off 2-steps 4=On/Off 3-steps binary 5=CoolDX economi (PV 2.00) 6=CoolDX comfort (PV 3.00)		
<b>4x0106</b>	<b>Heating boost regulation mode.</b>	0 - 1	
	Setting for heating boost function. 0=Inactive. 1=Active.		
<b>4x0107</b>	<b>Cooling boost regulation mode.</b>	0 - 5	PV 5.00
	Setting of cooling boost regulation type. 0=Inactive. 1=Comfort. 2=Economy. 3=Sequence. 4=Comfort+economy (New in PV 5.00). 5=Economy+sequence (New in PV 5.00).		
<b>4x0108</b>	<b>Filter calibration mode</b>	0 - 5	PV 5.00
	Setting for required filter calibration. 0=Inactive. 1=SA+EA-Filter. 2=SA-Filter. 3=EA-Filter. 4=HX. 5=ReCO2 (New in PV 5.00).		
<b>4x0109</b>	<b>Air adjustment time, minutes</b>	0 - 1727	
	Setting for amount of minutes to air adjustment function.		
<b>4x0110</b>	<b>Air adjustment time, hours</b>	0 - 28	
	Setting for amount of hours to air adjustment function.		
<b>4x0111</b>	<b>Handterminal language</b>	0 - 18	PV 5.01

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
	0=Svenska 1=Norsk 2=Dansk 3=Suomi 4=English 5=Français 6=Deutsch 7=Polski 8=Český 9=Italiano 10=Español 11=Português 12=Русский 13=Eesti 14=Latviesu 15=Lietiviu 16=Nederlands 17=Magyar (New in PV 5.00) 18=Türkçe (New in PV 5.01)		
<b>4x0112</b>	<b>Summer night cool start, hour</b>	0-23	
	Setting for start time of summer night cooling function.		
<b>4x0113</b>	<b>Summer night cool start, minute</b>	0-59	
	Setting for start time of summer night cooling function.		
<b>4x0114</b>	<b>Summer night cool stop, hour</b>	0-23	
	Setting for stop time of summer night cooling function.		
<b>4x0115</b>	<b>Summer night cool stop, minute</b>	0-59	
	Setting for stop time of summer night cooling function.		
<b>4x0116</b>	<b>Extra regulation sequence cool mode</b>	0 - 2	
	Setting of extra regulation sequence cool type. 0=Inactive. 1=Comfort. 2=Economi.		
<b>4x0117</b>	<b>Extra regulation sequence heat mode</b>	0 - 2	
	Setting of extra regulation sequence heat type. 0=Inactive. 1=Comfort. 2=Economi.		
<b>4x0118</b>	<b>Morning boost time, hours</b>	0-23	
	Setting of morning boost time before normal operation.		
<b>4x0119</b>	<b>Morning boost time, minutes</b>	0-59	
	Setting of morning boost time before normal operation.		
<b>4x0120</b>	<b>Startup time</b>	0 - 600s	
	Setting of time for startup when the unit regulator is running with fixed signals.		
<b>4x0121</b>	<b>Start delay SA fan.</b>	0 - 600s	
	Setting of start delay time for the supply air fan.		
<b>4x0122</b>	<b>Start delay EA fan.</b>	0 - 600s	
	Setting of start delay time for the extract air fan after supply air fan has started.		
<b>4x0123</b>	<b>Air flow unit</b>	0 - 2	

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
	Setting of air flow unit presented in the unit's handterminal and WEB. 0=l/s. 1=m3/s. 2=m3/h.		
4x0124	Reserve		PV 3.00
4x0125	Year	2000-2099	
	Setting for the unit's internal clock.		
4x0126	Month	1-12	
	Setting for the unit's internal clock.		
4x0127	Date	0-31	
	Setting for the unit's internal clock.		
4x0128	Hour	0-23	
	Setting for the unit's internal clock.		
4x0129	Minute	0-59	
	Setting for the unit's internal clock.		
4x0130	Second	0-59	
	Setting for the unit's internal clock.		
4x0131	Time channel 1 status	0-10,16-26	
	<b>Low speed                      Högfart</b> 0=Inactive                      16=Inactive 1=Monday                        17=Monday 2=Tuesday                       18=Tuesday 3=Wednesday                   19=Wednesday 4=Thursday.                    20=Thursday 5=Friday                        21=Friday 6=Saturday                      22=Saturday 7=Sunday                        23=Sunday 8=Monday..Friday              24=Monday..Friday 9=Monday..Sunday              25=Monday..Sunday 10=Saturday..Sunday          26=Saturday..Sunday		
4x0132	Time channel 1 start hour	0-23	
4x0133	Time channel 1 start minute	0-59	
4x0134	Time channel 1 stop hour	0-23	
4x0135	Time channel 1 stop minute	0-59	
4x0136	Time channel 2 status	0-10,16-26	
4x0137	Time channel 2 start hour	0-23	
4x0138	Time channel 2 start minute	0-59	
4x0139	Time channel 2 stop hour	0-23	
4x0140	Time channel 2 stop minute	0-59	
4x0141	Time channel 3 status	0-10,16-26	
4x0142	Time channel 3 start hour	0-23	
4x0143	Time channel 3 start minute	0-59	
4x0144	Time channel 3 stop hour	0-23	
4x0145	Time channel 3 stop minute	0-59	
4x0146	Time channel 4 status	0-10,16-26	
4x0147	Time channel 4 start hour	0-23	
4x0148	Time channel 4 start minute	0-59	
4x0149	Time channel 4 stop hour	0-23	
4x0150	Time channel 4 stop minute	0-59	
4x0151	Time channel 5 status	0-10,16-26	
4x0152	Time channel 5 start hour	0-23	

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
4x0153	Time channel 5 start minute	0-59	
4x0154	Time channel 5 stop hour	0-23	
4x0155	Time channel 5 stop minute	0-59	
4x0156	Time channel 6 status	0-10,16-26	
4x0157	Time channel 6 start hour	0-23	
4x0158	Time channel 6 start minute	0-59	
4x0159	Time channel 6 stop hour	0-23	
4x0160	Time channel 6 stop minute	0-59	
4x0161	Time channel 7 status	0-10,16-26	
4x0162	Time channel 7 start hour	0-23	
4x0163	Time channel 7 start minute	0-59	
4x0164	Time channel 7 stop hour	0-23	
4x0165	Time channel 7 stop minute	0-59	
4x0166	Time channel 8 status	0-10,16-26	
4x0167	Time channel 8 start hour	0-23	
4x0168	Time channel 8 start minute	0-59	
4x0169	Time channel 8 stop hour	0-23	
4x0170	Time channel 8 stop minute	0-59	
4x0171	<b>Extended low speed op. Hours</b>	0-23	
	Setting for extended low speed operation.		
4x0172	<b>Extended low speed op. Minutes</b>	0-59	
	Setting for extended low speed operation.		
4x0173	<b>Extended high speed op. Hours</b>	0-23	
	Setting for extended low speed operation.		
4x0174	<b>Extended high speed op. Minutes</b>	0-59	
	Setting for extended low speed operation.		
4x0175	<b>Communication operation mode</b>	0 - 4	PV 5.00
	Setting of unit operation mode from communication. 0=Auto operation. 1=Communication stop 1. 2=Communication low speed. 3=Communication high speed. 4=Communication stop 2 (New in PV 5.00). Summer night cool, intermittent night heat and morning boost functions works at stop 2.		
4x0176	<b>Service periode alarm.</b>	0-99	
	Setting for delay time in months before service alarm.		
4x0177	<b>External alarm 1 delay</b>	1 - 600s	
	Setting of delay time for external alarm no 1		
4x0178	<b>External alarm 2 delay</b>	1 - 600s	
	Setting of delay time for external alarm no 2		
4x0179	<b>Int. Night heat SA pressure setpoint</b>	20-750Pa	
	Intermittent night heat function, supply pressure setpoint during night heat.		
4x0180	<b>Int. Night heat EA pressure setpoint</b>	20-750Pa	
	Intermittent night heat function, extract pressure setpoint during night heat.		
4x0181	<b>Copy of Coil Status 1-16</b>	0-65535	
	Bit 0=1x0001 Bit 1=1x0002 Bit 15=1x0016		
4x0182	<b>Copy of Coil Statust 17-32</b>	0-65535	

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
	Bit 0=1x00017 Bit 1=1x00018 Bit 15=1x0032		
<b>4x0183</b>	<b>Copy of Coil Status 33-48</b>	0-65535	
	Bit 0=1x00033 Bit 1=1x00034 Bit 15=1x0048		
<b>4x0184</b>	<b>Heat relay periodic func.</b>	0-3	PV 2.02
	Setting of periodic operation. 0=Inactive 1=Pump 2=Pump+valve 3=Valve (PV 2.02)		
<b>4x0185</b>	<b>Cool relay 1 periodic func.</b>	0-3	PV 2.02
	Setting of periodic operation. 0=Inactive 1=Pump 2=Pump+valve 3=Valve (PV 2.02)		
<b>4x0186</b>	<b>Cool relay 2 periodic func.</b>	0-3	PV 2.02
	Setting of periodic operation. 0=Inactive 1=Pump 2=Pump+valve 3=Valve (PV 2.02)		
<b>4x0187</b>	<b>Slave control C-factor</b>	0.5 - 2.0	PV 5.07
	Slave regulator affection setting.		
<b>4x0188</b>	<b>SA dehumid P-band</b>	1.00 - 40.00	PV 5.00
	SA dehumid regulator P-band setting.		
<b>4x0189</b>	<b>SA dehumid C-factor</b>	0.000 - 2.500	
	SA dehumid regulator affection setting.		
<b>4x0190</b>	<b>Dewpoint reg. P-band</b>	1.00 - 40.00	PV 5.00
	Dewpoint regulator P-band setting.		
<b>4x0191</b>	<b>Dewpoint reg. C-factor</b>	0.000 - 2.500	
	Dewpoint regulator affection setting.		
<b>4x0192</b>	<b>AYC chilled water temperature</b>	5.00-30.00°C	
	Setting of AYC chilled water temperature setpoint.		
<b>4x0193</b>	<b>Dewpoint neutralzone</b>	0.00-5.00°C	
	Dewpoint neutralzone setting.		
<b>4x0194</b>	<b>Comp. airflow</b>	0-30.00%	
	Setting of comp. airflow.		
<b>4x0195</b>	<b>Supply air-humidity</b>	10.00-90.00%	
	Setting of supply air-humidity.		
<b>4x0196</b>	<b>Water heating periodic op. time</b>	0-60min	
	Setting of periodic op. time (minute).		
<b>4x0197</b>	<b>Water heating interval</b>	0-168h	
	Setting of water heating interval time (hour).		
<b>4x0198</b>	<b>Cool periodic op. time</b>	0-60min	PV 2.02
	Setting of periodic op. time (minute).		
<b>4x0199</b>	<b>Cool interval</b>	0-168h	PV 2.02
	Setting of cool interval time (hour).		
<b>4x0200</b>	<b>P/C.HX. bypass adj.</b>	-5.00-5.00°C	PV 2.02
	Setting of plate/coil heat exchange bypass adjustment.		
<b>4x0201</b>	<b>EA/Room temperature (external) func.</b>	0-2	PV 3.00

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
	Setting of EA/Room temperature (external) function. 0= Inactive. 1= Input signal on terminal 40..41. 2= Communication (4x0202).		
<b>4x0202</b>	<b>EA/Room temperature com.</b>	-55.00-125.00°C	PV 3.00
	Setting of EA/Room temperature via communication.		
<b>4x0203</b>	<b>Outdoor temperature (external) func.</b>	0-2	PV 3.00
	Setting of outdoor temperature (external) function. 0= Inactive. 1= Input signal on terminal 38..39. 2= Communication (4x0204).		
<b>4x0204</b>	<b>Outdoor temperature com.</b>	-55.00-125.00°C	PV 3.00
	Setting of outdoor temperature via communication.		
<b>4x0205</b>	<b>Timeout temperature com.</b>	0-9999min	PV 3.00
	Setting of timeout for temperature via communication (4x0202, 4x0204).		
<b>4x0206</b>	<b>Flow at fire function.</b>	0-3	PV 3.00
	Setting for activating the air fan operation at fire function 0= Inactive. 1= SA. 2= EA. 3= SA+EA.		
<b>4x0207</b>	<b>Air fan down regulation func.</b>	0-2	PV 3.00
	Setting for activating the air fan down regulation function 0= Inactive. 1= SA. 2= SA+EA.		
<b>4x0208</b>	<b>SA speed at fire.</b>	50.00-100.00%	PV 3.00
	Setting of supply air speed at fire.		
<b>4x0209</b>	<b>EA speed at fire.</b>	50.00-100.00%	PV 3.00
	Setting of extract air speed at fire.		
<b>4x0210</b>	<b>Temperature alarm setpoint.</b>	-25.00-25.00°C	PV 3.00
	Temperature alarm function setting (no.80).		
<b>4x0211</b>	<b>Temperature alarm time.</b>	1-999s	PV 3.00
	Setting of delay time for temperature alarm (no.80).		
<b>4x0212</b>	<b>Supply air min P-band.</b>	1.00 - 40.00	PV 3.00
	Supply air min regulator P-band setting.		
<b>4x0213</b>	<b>Supply air min C-factor.</b>	0.000 - 2.500	PV 3.00
	Supply air min regulator affection setting.		
<b>4x0214</b>	<b>Supply air max P-band.</b>	1.00 - 40.00	PV 3.00
	Supply air max regulator P-band setting.		
<b>4x0215</b>	<b>Supply air max C-factor.</b>	0.000 - 2.500	PV 3.00
	Supply air max regulator affection setting.		
<b>4x0216</b>	<b>Year channel 1 function.</b>	0 - 3	PV 3.00
	0 = Inactive. 1 = Stop. 2 = Low speed. 3 = High speed.		
<b>4x0217</b>	<b>Year channel 1 start year.</b>	2000 - 2099	PV 3.00
<b>4x0218</b>	<b>Year channel 1 start month.</b>	1 - 12	PV 3.00
<b>4x0219</b>	<b>Year channel 1 start date.</b>	1 - 31	PV 3.00
<b>4x0220</b>	<b>Year channel 1 start hour.</b>	0 - 23	PV 3.00
<b>4x0221</b>	<b>Year channel 1 start minute.</b>	0 - 59	PV 3.00
<b>4x0222</b>	<b>Year channel 1 stop year.</b>	2000 - 2099	PV 3.00
<b>4x0223</b>	<b>Year channel 1 stop month.</b>	1 - 12	PV 3.00

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
4x0224	Year channel 1 stop date.	1 - 31	PV 3.00
4x0225	Year channel 1 stop hour.	0 - 23	PV 3.00
4x0226	Year channel 1 stop minute.	0 - 59	PV 3.00
4x0227	Year channel 2 function.	0 - 3	PV 3.00
4x0228	Year channel 2 start year.	2000 - 2099	PV 3.00
4x0229	Year channel 2 start month.	1 - 12	PV 3.00
4x0230	Year channel 2 start date.	1 - 31	PV 3.00
4x0231	Year channel 2 start hour.	0 - 23	PV 3.00
4x0232	Year channel 2 start minute.	0 - 59	PV 3.00
4x0233	Year channel 2 stop year.	2000 - 2099	PV 3.00
4x0234	Year channel 2 stop month.	1 - 12	PV 3.00
4x0235	Year channel 2 stop date.	1 - 31	PV 3.00
4x0236	Year channel 2 stop hour.	0 - 23	PV 3.00
4x0237	Year channel 2 stop minute.	0 - 59	PV 3.00
4x0238	Year channel 3 function.	0 - 3	PV 3.00
4x0239	Year channel 3 start year.	2000 - 2099	PV 3.00
4x0240	Year channel 3 start month.	1 - 12	PV 3.00
4x0241	Year channel 3 start date.	1 - 31	PV 3.00
4x0242	Year channel 3 start hour.	0 - 23	PV 3.00
4x0243	Year channel 3 start minute.	0 - 59	PV 3.00
4x0244	Year channel 3 stop year.	2000 - 2099	PV 3.00
4x0245	Year channel 3 stop month.	1 - 12	PV 3.00
4x0246	Year channel 3 stop date.	1 - 31	PV 3.00
4x0247	Year channel 3 stop hour.	0 - 23	PV 3.00
4x0248	Year channel 3 stop minute.	0 - 59	PV 3.00
4x0249	Year channel 4 function.	0 - 3	PV 3.00
4x0250	Year channel 4 start year.	2000 - 2099	PV 3.00
4x0251	Year channel 4 start month.	1 - 12	PV 3.00
4x0252	Year channel 4 start date.	1 - 31	PV 3.00
4x0253	Year channel 4 start hour.	0 - 23	PV 3.00
4x0254	Year channel 4 start minute.	0 - 59	PV 3.00
4x0255	Year channel 4 stop year.	2000 - 2099	PV 3.00
4x0256	Year channel 4 stop month.	1 - 12	PV 3.00
4x0257	Year channel 4 stop date.	1 - 31	PV 3.00
4x0258	Year channel 4 stop hour.	0 - 23	PV 3.00
4x0259	Year channel 4 stop minute.	0 - 59	PV 3.00
4x0260	Year channel 5 function.	0 - 3	PV 3.00
4x0261	Year channel 5 start year.	2000 - 2099	PV 3.00
4x0262	Year channel 5 start month.	1 - 12	PV 3.00
4x0263	Year channel 5 start date.	1 - 31	PV 3.00
4x0264	Year channel 5 start hour.	0 - 23	PV 3.00
4x0265	Year channel 5 start minute.	0 - 59	PV 3.00
4x0266	Year channel 5 stop year.	2000 - 2099	PV 3.00
4x0267	Year channel 5 stop month.	1 - 12	PV 3.00
4x0268	Year channel 5 stop date.	1 - 31	PV 3.00
4x0269	Year channel 5 stop hour.	0 - 23	PV 3.00
4x0270	Year channel 5 stop minute.	0 - 59	PV 3.00
4x0271	Year channel 6 function.	0 - 3	PV 3.00
4x0272	Year channel 6 start year.	2000 - 2099	PV 3.00
4x0273	Year channel 6 start month.	1 - 12	PV 3.00
4x0274	Year channel 6 start date.	1 - 31	PV 3.00
4x0275	Year channel 6 start hour.	0 - 23	PV 3.00
4x0276	Year channel 6 start minute.	0 - 59	PV 3.00
4x0277	Year channel 6 stop year.	2000 - 2099	PV 3.00
4x0278	Year channel 6 stop month.	1 - 12	PV 3.00

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
4x0279	Year channel 6 stop date.	1 - 31	PV 3.00
4x0280	Year channel 6 stop hour.	0 - 23	PV 3.00
4x0281	Year channel 6 stop minute.	0 - 59	PV 3.00
4x0282	Year channel 7 function.	0 - 3	PV 3.00
4x0283	Year channel 7 start year.	2000 - 2099	PV 3.00
4x0284	Year channel 7 start month.	1 - 12	PV 3.00
4x0285	Year channel 7 start date.	1 - 31	PV 3.00
4x0286	Year channel 7 start hour.	0 - 23	PV 3.00
4x0287	Year channel 7 start minute.	0 - 59	PV 3.00
4x0288	Year channel 7 stop year.	2000 - 2099	PV 3.00
4x0289	Year channel 7 stop month.	1 - 12	PV 3.00
4x0290	Year channel 7 stop date.	1 - 31	PV 3.00
4x0291	Year channel 7 stop hour.	0 - 23	PV 3.00
4x0292	Year channel 7 stop minute.	0 - 59	PV 3.00
4x0293	Year channel 8 function.	0 - 3	PV 3.00
4x0294	Year channel 8 start year.	2000 - 2099	PV 3.00
4x0295	Year channel 8 start month.	1 - 12	PV 3.00
4x0296	Year channel 8 start date.	1 - 31	PV 3.00
4x0297	Year channel 8 start hour.	0 - 23	PV 3.00
4x0298	Year channel 8 start minute.	0 - 59	PV 3.00
4x0299	Year channel 8 stop year.	2000 - 2099	PV 3.00
4x0300	Year channel 8 stop month.	1 - 12	PV 3.00
4x0301	Year channel 8 stop date.	1 - 31	PV 3.00
4x0302	Year channel 8 stop hour.	0 - 23	PV 3.00
4x0303	Year channel 8 stop minute.	0 - 59	PV 3.00
4x0304	Filter select.	0 - 3	PV 5.00
	Setting for filter select function. 0=Inactive. 1=Supply air. 2=Extract air. 3=SA+EA.		
4x0305	Prefilter select.	0 - 3	PV 5.00
	Setting for prefilter select function. 0=Inactive. 1=Supply air. 2=Extract air. 3=SA+EA.		
4x0306	SA prefilter alarm limit.	50-300Pa	PV 5.00
	Supply air prefilter pressure alarm limit setting.		
4x0307	EA prefilter alarm limit.	50-300Pa	PV 5.00
	Extract air prefilter pressure alarm limit setting.		
4x0308	Prefilter calibration mode.	0 - 3	PV 5.00
	Setting for required filtercalibration. 0=Inactive. 1=SA+EA-Filter. 2=SA-Filter. 3=EA-Filter.		
4x0309	Xzone reheat function.	0 - 4	PV 5.00
	Setting for Xzone reheat function. 0=Inactive. 1=El. coil P/P. 2=El. coil 0-10V. 3=Water coil with FP. 4=Water coil without FP.		
4x0310	Xzone cooling function.	0 - 5	PV 5.00

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
	Setting for Xzone cooling function. 0=Inactive. 1=0-10V. 2=10-0V. 3=On/off 1. 4=On/off 2. 5=On/off 3.		
<b>4x0311</b>	<b>Xzone temperature reg. Neutral zone.</b>	0.50-10.00°C	PV 5.00
	Xzone neutral zone setting before shift between heating and cooling.		
<b>4x0312</b>	<b>Xzone temperature regulation mode.</b>	0 - 3	PV 5.00
	Setting of Xzone temperature regulation type. 0=ERS 1 reg. 1=ERS 2 reg. 2=SA reg. 3=EA/Room reg.		
<b>4x0313</b>	<b>Xzone ERS Step.</b>	1 - 4	PV 5.00
	Setting of Xzone curve when temperature is above breakpoint.		
<b>4x0314</b>	<b>Xzone ERS 1 Diff.</b>	1.00 - 7.00°C	PV 5.00
	Supply air temperature difference setting according to the diagram for Xzone ERS 1.		
<b>4x0315</b>	<b>Xzone ERS 1 Breakpoint.</b>	12.00 - 26.00°C	PV 5.00
	Breakpoint setting according to the diagram for Xzone ERS 1.		
<b>4x0316</b>	<b>Xzone ERS 2 Breakpoint X1.</b>	10.00-38.00°C	PV 5.00
	Breakpoint X1 setting according to the diagram for Xzone ERS 2.		
<b>4x0317</b>	<b>Xzone ERS 2 Breakpoint Y1.</b>	10.00-40.00°C	PV 5.00
	Breakpoint Y1 setting according to the diagram for Xzone ERS 2.		
<b>4x0318</b>	<b>Xzone ERS 2 Breakpoint X2.</b>	11.00-39.00°C	PV 5.00
	Breakpoint X2 setting according to the diagram for Xzone ERS 2.		
<b>4x0319</b>	<b>Xzone ERS 2 Breakpoint Y2.</b>	10.00-40.00°C	PV 5.00
	Breakpoint Y2 setting according to the diagram for Xzone ERS 2.		
<b>4x0320</b>	<b>Xzone ERS 2 Breakpoint X3.</b>	12.00-40.00°C	PV 5.00
	Breakpoint X3 setting according to the diagram for Xzone ERS 2.		
<b>4x0321</b>	<b>Xzone ERS 2 Breakpoint Y3.</b>	10.00-40.00°C	PV 5.00
	Breakpoint Y3 setting according to the diagram for Xzone ERS 2.		
<b>4x0322</b>	<b>Xzone SA Temperature setpoint.</b>	10.00-40.00°C	PV 5.00
	Xzone supply air temperature setting, for supply air temp regulation mode.		
<b>4x0323</b>	<b>Xzone EA/Room Temperature setpoint.</b>	10.00-40.00°C	PV 5.00
	Xzone extract air/room temperature setting, for extract air/room temp regulation mode.		
<b>4x0324</b>	<b>Xzone SA Min temp setpoint.</b>	8.00-20.00°C	PV 5.00
	Xzone supply air min.setpoint during EA/room regulation mode.		
<b>4x0325</b>	<b>Xzone SA Max temp setpoint.</b>	16.00-50.00°C	PV 5.00
	Xzone supply air max.setpoint during EA/room regulation mode.		

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
4x0326	<b>Preheating function.</b>	0 - 4	PV 5.00
	Setting of preheating function. 0=Inactive. 1=El. coil P/P. 2=El. coil 0-10V. 3=Water coil with FP. 4=Water coil without FP.		
4x0327	<b>Preheating setpoint.</b>	-30.00-30.00°C	PV 5.00
	Setting of preheating temperature setpoint.		
4x0328	<b>Xzone P-band.</b>	1.00-40.00	PV 5.00
	Xzone regulator P-band setting.		
4x0329	<b>Xzone SA reheat C-factor.</b>	0.000 - 2.500	PV 5.00
	Xzone supply air reheat regulator affection setting.		
4x0330	<b>Xzone SA cooling C-factor.</b>	0.000 - 2.500	PV 5.00
	Xzone supply air cooling regulator affection setting.		
4x0331	<b>Xzone EA reheat C-factor.</b>	0.000 - 2.500	PV 5.00
	Xzone extract air reheat regulator affection setting.		
4x0332	<b>Xzone EA cooling C-factor.</b>	0.000 - 2.500	PV 5.00
	Xzone extract air cooling regulator affection setting.		
4x0333	<b>Xzone SA min P-band.</b>	1.00 - 40.00	PV 5.00
	Xzone supply air min regulator P-band setting.		
4x0334	<b>Xzone SA min C-factor.</b>	0.000 - 2.500	PV 5.00
	Xzone supply air min regulator affection setting.		
4x0335	<b>Xzone SA max P-band.</b>	1.00 - 40.00	PV 5.00
	Xzone supply air max regulator P-band setting.		
4x0336	<b>Xzone SA max C-factor.</b>	0.000 - 2.500	PV 5.00
	Xzone supply air min regulator affection setting.		
4x0337	<b>Preheat P-band.</b>	1.00 - 40.00	PV 5.00
	Preheat regulator P-band setting.		
4x0338	<b>Preheat C-factor.</b>	0.000 - 2.500	PV 5.00
	Preheat regulator affection setting.		
4x0339	<b>ReCO2 CO2 function.</b>	0 - 2	PV 5.00
	Setting of ReCO2 CO2 function. 0=Inactive. 1=CO2. 2=CO2+flow.		
4x0340	<b>ReCO2 CO2 setpoint.</b>	0-100.00%	PV 5.00
	Setting of ReCO2 CO2 setpoint.		
4x0341	<b>ReCO2 cooling function.</b>	0 - 2	PV 5.00
	Setting of ReCO2 cooling function. 0=Inactive. 1=Comfort. 2=Economy.		
4x0342	<b>ReCO2 heating function.</b>	0 - 2	PV 5.00
	Setting of ReCO2 heating function. 0=Inactive. 1=Comfort. 2=Economy.		
4x0343	<b>ReCO2 min outdoor air.</b>	0-8200l/s	PV 5.00
	Setting of ReCO2 min outdoor air.		
4x0344	<b>ReCO2 min exhaust air.</b>	0-8200l/s	PV 5.00
	Setting of ReCO2 min exhaust air.		
4x0345	<b>ReCO2 CO2 P-band.</b>	1.00 - 100.00	PV 5.00
	ReCO2 CO2 regulator P-band setting.		
4x0346	<b>ReCO2 CO2 C-factor.</b>	0.000 - 5.000	PV 5.00

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
	ReCO2 CO2 regulator affection setting.		
<b>4x0347</b>	<b>ReCO2 CO2 flow C-factor.</b>	0.000 - 5.000	PV 5.00
	ReCO2 flow regulator affection setting.		
<b>4x0348</b>	<b>ReCO2 heating C-factor.</b>	0.000 - 5.000	PV 5.00
	ReCO2 heating regulator affection setting.		
<b>4x0349</b>	<b>ReCO2 cooling C-factor.</b>	0.000 - 5.000	PV 5.00
	ReCO2 cooling regulator affection setting.		
<b>4x0350</b>	<b>AYC function.</b>	0 - 3	PV 5.07
	Setting of AYC function. 0=Inactive. 1=Cool. 2=Heat. 3=Cool+heat.		
<b>4x0351</b>	<b>AYC heat temp set.</b>	10.00-80.00°C	PV 5.07
	Setting of AYC heated water temperature setpoint.		
<b>4x0352</b>	<b>AYC night comp. channel.</b>	1 - 2	PV 5.07
	Setting of AYC night compensation channel. 1=Channel 1. 2=Channel 2.		
<b>4x0353</b>	<b>AYC channel start hour.</b>	0-23h	PV 5.07
	Setting of AYC channel start time (hour).		
<b>4x0354</b>	<b>AYC channel start minute.</b>	0-59min	PV 5.07
	Setting of AYC channel start time (minute).		
<b>4x0355</b>	<b>AYC channel stop hour.</b>	0-23h	PV 5.07
	Setting of AYC channel stop time (hour).		
<b>4x0356</b>	<b>AYC channel stop minute.</b>	0-59min	PV 5.07
	Setting of AYC channel stop time (minute).		
<b>4x0357</b>	<b>AYC channel period.</b>	0-10	PV 5.07
	Setting of AYC channel period. 0=Inactive 1=Monday 2=Tuesday 3=Wednesday 4=Thursday 5=Friday 6=Saturday 7=Sunday 8=Monday..Friday 9=Monday..Sunday 10=Saturday..Sunday		
<b>4x0358</b>	<b>AYC heat P-band.</b>	1.00 - 40.00	PV 5.07
	AYC heat regulator P-band setting.		
<b>4x0359</b>	<b>AYC heat C-factor.</b>	0.000 - 2.500	PV 5.07
	AYC heat regulator affection setting.		
<b>4x0360</b>	<b>AYC cool P-band.</b>	1.00 - 40.00	PV 5.07
	AYC cool regulator P-band setting.		
<b>4x0361</b>	<b>AYC cool C-factor.</b>	0.000 - 2.500	PV 5.07
	AYC cool regulator affection setting.		
<b>4x0362</b>	<b>AYC heat out comp. X1.</b>	-40.00-40.00°C	PV 5.07
	AYC outdoor compensation of heated water, outdoor temp X1 setting.		
<b>4x0363</b>	<b>AYC heat out comp. Y1.</b>	10.00-80.00°C	PV 5.07
	AYC outdoor compensation of heated water, heated water temp Y1 setting.		
<b>4x0364</b>	<b>AYC heat out comp. X2.</b>	-40.00-40.00°C	PV 5.07

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
	AYC outdoor compensation of heated water, outdoor temp X2 setting.		
<b>4x0365</b>	<b>AYC heat out comp. Y2.</b>	10.00-80.00°C	PV 5.07
	AYC outdoor compensation of heated water, heated water temp Y2 setting.		
<b>4x0366</b>	<b>AYC heat out comp. X3.</b>	-40.00-40.00°C	PV 5.07
	AYC outdoor compensation of heated water, outdoor temp X3 setting.		
<b>4x0367</b>	<b>AYC heat out comp. Y3.</b>	10.00-80.00°C	PV 5.07
	AYC outdoor compensation of heated water, heated water temp Y3 setting.		
<b>4x0368</b>	<b>AYC heat room comp. temp limit.</b>	0.00-40.00°C	PV 5.07
	AYC room compensation of heated water, heated water temp limit setting.		
<b>4x0369</b>	<b>AYC heat room comp P-band.</b>	1.00-10.00°C	PV 5.07
	AYC room compensation of heated water, heated water P-band setting.		
<b>4x0370</b>	<b>AYC heat night comp temp.</b>	-10.00-10.00°C	PV 5.07
	AYC night compensation of heated water, heated water night setting.		
<b>4x0371</b>	<b>AYC heat pump on temp.</b>	-40.00-40.00°C	PV 5.07
	AYC pump operation of heated water, outdoor temp start setting.		
<b>4x0372</b>	<b>AYC heat pump off temp.</b>	-40.00-40.00°C	PV 5.07
	AYC pump operation of heated water, outdoor temp stop setting.		
<b>4x0373</b>	<b>AYC heat pump alarm.</b>	0 - 3	PV 5.07
	Setting for selecting the AYC heated water pump alarm function. 0=Inactive. 1=Open. 2=Closed. 3=Contactor.		
<b>4x0374</b>	<b>AYC heat per op function.</b>	0 - 3	PV 5.07
	Setting for selecting the AYC heated water periodic operation function. 0=Inactive. 1=Pump. 2=Pump+valve. 3=Valve.		
<b>4x0375</b>	<b>AYC heat per op time.</b>	0-60min	PV 5.07
	AYC periodic operation of heated water, time (minute) setting.		
<b>4x0376</b>	<b>AYC heat per op interval.</b>	0-168h	PV 5.07
	AYC periodic operation of heated water, interval time (hour) setting.		
<b>4x0377</b>	<b>AYC cool out comp. X1.</b>	-40.00-40.00°C	PV 5.07
	AYC outdoor compensation of chilled water, outdoor temp X1 setting.		
<b>4x0378</b>	<b>AYC cool out comp. Y1.</b>	10.00-80.00°C	PV 5.07
	AYC outdoor compensation of chilled water, chilled water temp Y1 setting.		
<b>4x0379</b>	<b>AYC cool out comp. X2.</b>	-40.00-40.00°C	PV 5.07
	AYC outdoor compensation of chilled water, outdoor temp X2 setting.		

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
4x0380	<b>AYC cool out comp. Y2.</b>	10.00-80.00°C	PV 5.07
	AYC outdoor compensation of chilled water, chilled water temp Y2 setting.		
4x0381	<b>AYC cool out comp. X3.</b>	-40.00-40.00°C	PV 5.07
	AYC outdoor compensation of chilled water, outdoor temp X3 setting.		
4x0382	<b>AYC cool out comp. Y3.</b>	10.00-80.00°C	PV 5.07
	AYC outdoor compensation of chilled water, chilled water temp Y3 setting.		
4x0383	<b>AYC cool room comp. temp limit.</b>	0.00-40.00°C	PV 5.07
	AYC room compensation of chilled water, chilled water temp limit setting.		
4x0384	<b>AYC cool room comp. P-band.</b>	1.00-10.00°C	PV 5.07
	AYC room compensation of chilled water, chilled water P-band setting.		
4x0385	<b>AYC cool night comp temp.</b>	-10.00-10.00°C	PV 5.07
	AYC night compensation of chilled water, chilled water night setting.		
4x0386	<b>AYC cool pump on temp.</b>	-40.00-40.00°C	PV 5.07
	AYC pump operation of chilled water, outdoor temp start setting.		
4x0387	<b>AYC cool pump off temp.</b>	-40.00-40.00°C	PV 5.07
	AYC pump operation of chilled water, outdoor temp stop setting.		
4x0388	<b>AYC cool pump alarm.</b>	0 - 3	PV 5.07
	Setting for selecting the AYC chilled water pump alarm function. 0=Inactive. 1=Open. 2=Closed. 3=Contactor.		
4x0389	<b>AYC cool per op function.</b>	0 - 3	PV 5.07
	Setting for selecting the AYC chilled water periodic operation function. 0=Inactive. 1=Pump. 2=Pump+valve. 3=Valve.		
4x0390	<b>AYC cool per op time.</b>	0-60min	PV 5.07
	AYC periodic operation of chilled water, time (minute) setting.		
4x0391	<b>AYC cool per op interval.</b>	0-168h	PV 5.07
	AYC periodic operation of chilled water, interval time (hour) setting.		
4x0392	<b>IO-mod 3 output 1 function.</b>	0 - 10	PV 5.07

**Holding Registers. 16-bit integer value (R/W).**

Modbus	Name	Min/Max	Misc
	Setting of I/O-module no. 3 relay 1 output. 0=Cooling boost. 1=Heating boost. 2=Cooling. 3=Heat exchange. 4=Reheat. 5=Down regulation. 6=Effect reduction. 7=Intermittent night heat. 8=Summer night cooling. 9=Morning boost. 10=Heat exchange defrost.		
<b>4x0393</b>	<b>IO-mod 3 output 2 function.</b>	<b>0 - 10</b>	<b>PV 5.07</b>
	Setting of I/O-module no. 3 relay 2 output. 0=Cooling boost. 1=Heating boost. 2=Cooling. 3=Heat exchange. 4=Reheat. 5=Down regulation. 6=Effect reduction. 7=Intermittent night heat. 8=Summer night cooling. 9=Morning boost. 10=Heat exchange defrost.		